

Models HBAJ, HCAJ, HSAJ, HTAJ
 120, 208, 230, 277, 380, 415, 460, 575V — 1 Phase - 5, 10 LB/HR
 Models HBDJ, HCDJ, HSDJ, HTDJ
 208, 230, 277, 380, 415, 460, 575V — 1 Phase - 20 LB/HR

CARNES COMPANY 448 S. Main St., P. O. Box 930040, Verona, WI 53593-0040 Phone: (608)845-6411 Fax: (608)845-6504 www.carnes.com

NOTES:

1. Observe proper polarity when using voltage or current devices.
2. If air flow and high limit switches are not used, a jumper must be installed.

————— By Carnes
 - - - - - By Others

