


### CONTROLS, DAMPERS AND COIL ARRANGEMENTS

- \*1 - Normally Open - Right Hand Controls  
(All Electric/Electronic/Manual Control Types/DO, DE, NS)  
(All Pneumatic Control Types for Reverse Acting Thermostat)
- \*2 - Normally Open - Left Hand Controls  
(All Electric/Electronic/Manual Control types/DO, DE, NS)  
(All Pneumatic Control Types for Reverse Acting Thermostat)
- 3 - Normally Closed - Right Hand Controls  
(All Pneumatic Control Types for Direct Acting Thermostat)
- 4 - Normally Closed - Left Hand Controls  
(All Pneumatic Control Types for Direct Acting Thermostat)
- 5 - Normally Open - Right Hand Controls  
(All Pneumatic Control Types for Direct Acting Thermostat)
- 6 - Normally Open - Left Hand Controls  
(All Pneumatic Control Types for Direct Acting Thermostat)
- 7 - Normally Closed - Right Hand Controls  
(All Pneumatic Control Types for Reverse Acting Thermostat)
- 8 - Normally Closed - Left Hand Controls  
(All Pneumatic Control Types for Reverse Acting Thermostat)

\* Electric, Electronic and DDC Units **DO NOT** fail open. '1' or '2' is used for Right or Left Hand Only. Electric/Electronic Units are shipped with the Damper in the Open Position.


**NOTE:** Hand of controls is determined by facing the averaging flow sensor (inlet of the unit) with the supply air hitting the back of your head.

### ▼ Electric Thermostat

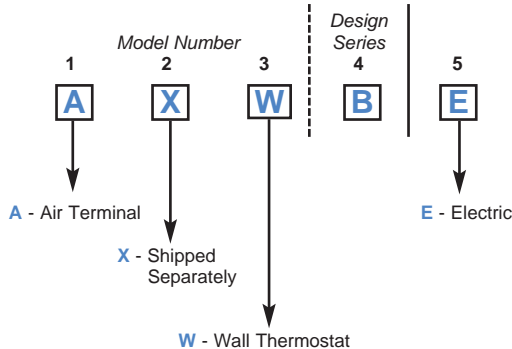

A Carnes Electric Thermostat **must be ordered** with the Electric ER and EK Control Options.

### ▼ Electronic Thermostat

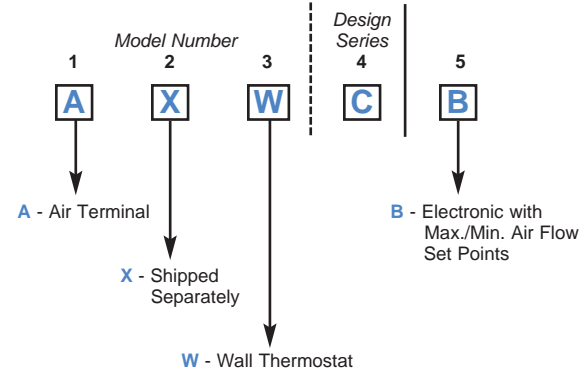

A Carnes Electronic Thermostat **must be ordered** with the ET Electronic Control Option.